

## WaveLine™ Counter Setup Instructions



1. Remove the counter from the molded soft bag.



2. Extend and lock the support poles.



3. Place the 3 poles with the holes facing up.




4. Place counter top onto poles.Tap down with hand to secure.



5. Slide fabric graphic wrap onto hardware. Align seamto center of back of counter.



Angle and tuck gasket into channel in edge of counter top.Insert graphic gasket all the way around.

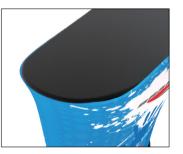

7. Tum counter upside-down.



8. Pull graphic taut and angel and tuck gasket into channel in edge of foot. Insert graphic gasket all the way around.



9. Turn counter back over.



10. The zipper on the back is used to access in side the unit.